

How to connect Hardware



Picture showing important parts of Ultra box




Connect Dongle and Controller

You have to push the units together, it is a snap in connection
Be sure units are connected proper



Connect controller and Main Unit with mini USB cable

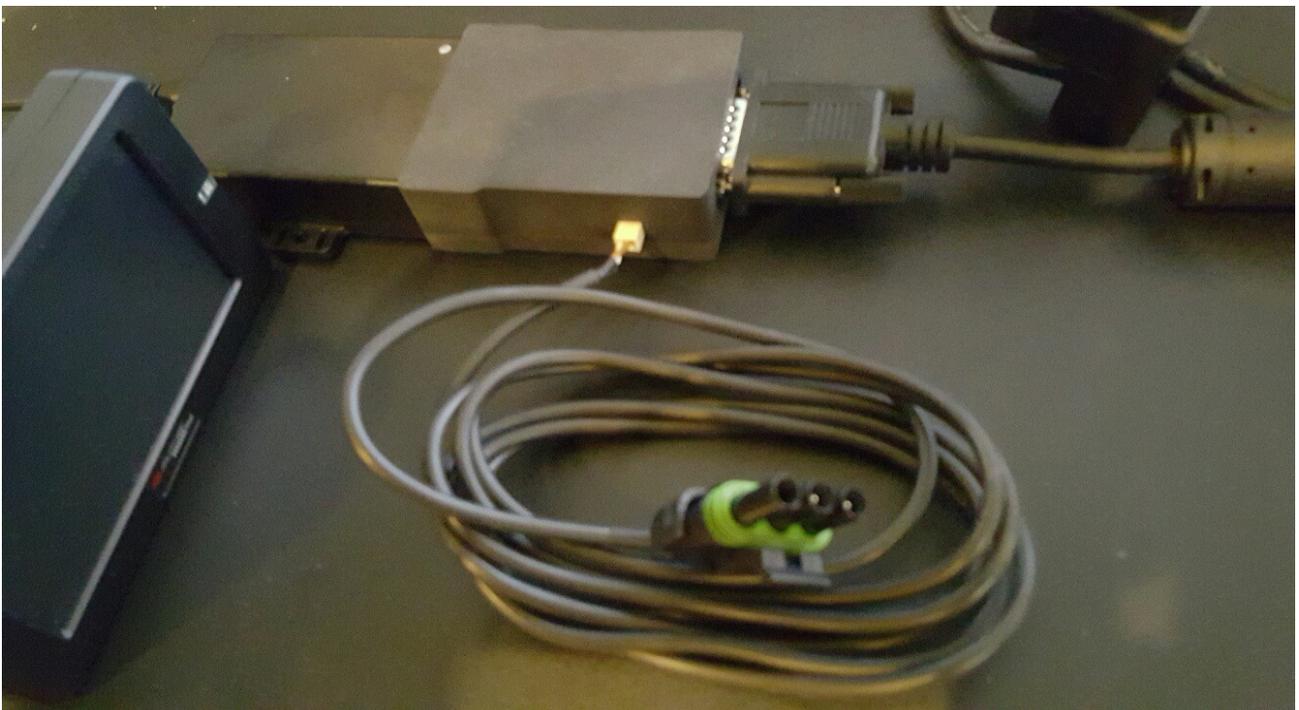

Connect RSA Unlock cable to Dongle
This wire must go into engine compartment to the under Hood Bus connector what is located below air horn and ECM



Here are shown:

**In the middle a USB connector for future special tuning tools
On right side a white connector for the EGT sensor**

**Secure the controller and dongle with fasteners
avoid movement of the units, it has to be in a save place
under the dash**



**A USB thumb adapter is attached with mini SD card inserted
Plug adapter to your computer and download latest software release.
Unzip it and copy files and directories to SD card
You can format the card with FAT system before you copy files on it.
You find file here: <http://www.raceme.eu/index.php?page=product&info=11>**